

Výmena termostatického člena vo ventiloch typu TSV3 až TSV8 a TSV3B až TSV8B



Model TSV3 to TSV8 and TSV3B to TSV8B
Replacement of Thermostatic Element in Valves

Instruction Manual

Removing the thermostatic element:

Prior to opening TSV valve close ball valves on all connecting pipes in order to avoid system emptying. Using a spanner #21 or a similar suitable tool, loosen and remove the plug together with the sealing O-ring. Take out the pressure spring and the thermostatic element itself. Remove eventual impurities settled in the valve body or plug.

Thermostatic element installation depends on the position of the valve:



Assembly to a valve mounted with the plug pointing upwards or sideways:

Fit the sealing O-ring onto the plug. Should the original O-ring get damaged, please use the O-ring from the kit. Insert a new thermostatic element into the TSV valve and make sure it is seated with its entire flange surface on the valve saddle. Then put the spring on the thermostatic element and hold it pushed against the valve saddle. Fit the plug on the spring so that its center boss comes into the spring. Press it against the valve body (just moderate strength is needed) and turn a bit to keep the plug fixed. Tighten it using a #21 spanner or a similar tool. Open the ball valves, air-bleed the heating system and top up heating fluid to the desired pressure.

Assembly to a valve mounted with the plug pointing downwards:

Fit the sealing O-ring onto the plug. Should the original O-ring get damaged, please use the O-ring from the kit. Put the spring onto the center boss in the plug and then the thermostatic element into the spring top. Insert this entire assembly into the valve body. Press the plug against the valve body (just moderate strength is needed) and turn a bit to keep the plug fixed. Tighten it using a #21 spanner or a similar tool. Open the ball valves, air-bleed the heating system and top up heating fluid to the desired pressure.

Sectional view of TSV B:

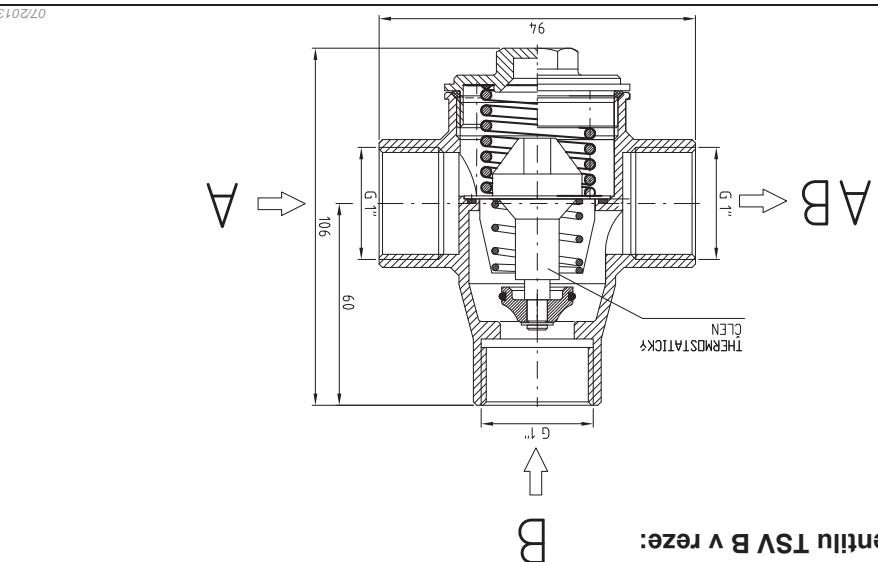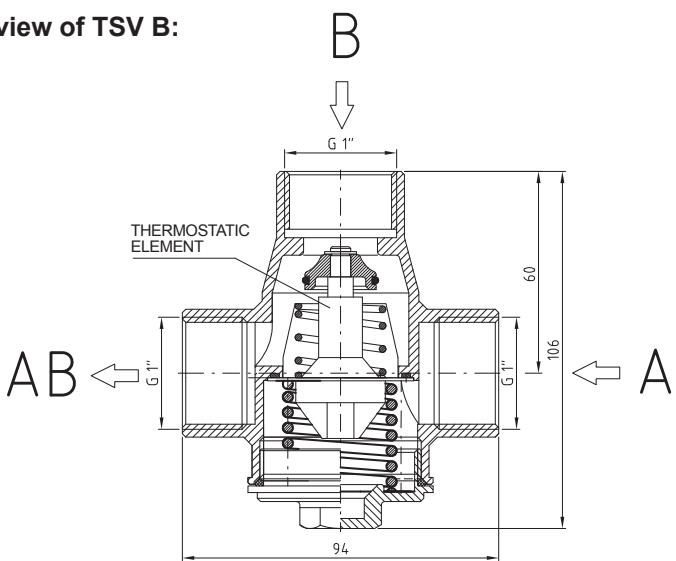

Náctok venují TSV B v rezé:

Demonstrácia termosatatickeho člena:

Pred otvorením ventila TSV zatvorte guľové ventily na všetky články prípojovacích portubálich, aby nedošlo k vypústeniu systému. Stranoverym kľúčom #21 alebo iným vŕhadlom nastojom povolte a vyberete zátku spoju s tensiacim O-kružkom. Vyberte pŕtliacu náštojku prúziku člena a termosataticky člen. Odstráňte prípadne nečistoty záchranného alebo v zátku ventila.